# Mark 94 Series

# High Flow Sanitary Steam Traps

The Mark 94 is a thermostatic steam trap designed specifically for use in high capacity clean steam systems where sanitary conditions must be maintained. It features a 20 Ra finish on all internal wetted parts, and a self-draining design, to minimize the possibility of medium entrapment and bacterial growth.

The Mark 94 has been designed to provide high condensate flow rates during SIP heat up, allowing vessels and other process equipment to reach validation temperature in minimum time.

The proprietary fill, bellows and orifice design minimize the subcooling required to open the trap during SIP temperature hol, insuring fast drainage under lower load conditions to help insure against low temperature faults.

The Mark 94 is designed for use up to 50 psig (3,5 bar) inlet pressure.

# **O**PERATION

During SIP Heatup, the bellows assembly is fully open to discharge all air, non-condensate gases and cool condensate. The heat of the entering steam causes the element to expand, closing the valve. As condensate accumulates in the body, the element cools, causing the bellows/stem tip to retract allowing condensate to flow.

## **F**EATURES

- Fill fluid meets FDA/ICH Q3C/FDA Class 3 criteria designation
- Body and solid internal components constructed of ASTM A479 316L
- Polished components body interior and exterior are mechanically polished to 20 Ra and 40Ra finish respectively
- Sanitary clamp ends standard, other ends (tube weld, threaded, ISO/DIN) available upon request
- Self draining when installed vertically (outlet side down)
- New design provides excellent flow rates with low subcooling during heat up and temperature hold period
- FDA, USP Class VI gasket standard
- Horizontal connections available



**APPLICATIONS** 

Typical applications are: fermentors,

Condensate drainage from large tube

Condensate drainage from large scale

process systems - fermenters, bioreactors,

holding vessels, separators, chromatogra-

bioreactors, sterilizers/autoclaves

clean steam distribution loops

phy vessels, etc.



Sanitary Valves

# Mark 94 Sanitary Steam Traps



STERIFLOW<sup>™</sup> A Division of Richards Industrials 3170 Wasson Road • Cincinnati, Ohio 45209 Telephone 513.533.5600 steriflow@richardsind.com • www.steriflowvalve.com

# **S**PECIFICATIONS

Sizes: 3/4" (DN20), 1" (DN25), 1-1/2" (DN40) **End Connections** 

- Standard Sanitary clamp ends (Tri-Clamp) •
- Optional Tube weld ends, DIN/ISO, threaded Connection Orientation: Vertical or horizontal

# Material

- Body Inlet/Outlet: 316L Stainless Steel
- Thermal Element: 316L Stainless Steel
- Gaskets (Standard): PTFE/Viton 350°F (177°C) • Optional: PTFE/EPDM - 300°F (149°C) Tuf-Steel -350°F (177°C), Silverback - 350°F (177°C) All gaskets are FDA and USP Class VI compliant
- Tri-Clamp: 304 SST

## Nominal Cv: 4.0

## Maximum Operating Conditions

- Maximum Operating Pressure (PMO): 50 psig • (3.5 bar)
- Maximum Allowable Temperature (TMA): 350°F • (177°C)

## **Design Pressure/Temperature Rating**

- ٠ Maximum Allowable Pressure (PMA): 145 psig (10.0 bar)
- Maximum Allowable Temperature (TMA): 350°F • (177°C)

Maximum Recommended Differential Pressure


MK94: 5 – 50 psi (0,34 – 3,5 bar)

CRN Number: CRN13987.5


Weight: 2.5 lbs (1,2 kgs)

# DIMENSIONS - VERTICAL CONNECTIONS

# **Bolted Clamp**

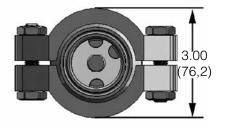



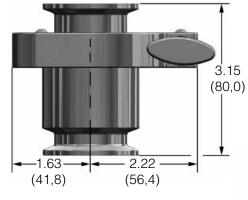

# FLOW CAPACITY TABLE


## 3/4" (DN20) Size Inlet/Outlets

Condensate Temp	Capacity - lbs/hr (kg/hr) @ Differential					
Below Saturation	Pressure - psi (bar)					
(Subcooled Temp)	10	20	30	40	50	
	(0,69)	(1,38)	(2,07)	(2,76)	(3,45)	
5°F	1355	1800	2460	3050	3410	
	(616)	(818)	(1118)	(1386)	(1550)	
10°F	2190	3065	3920	4620	5160	
	(996)	(1393)	(1782)	(2100)	(2346)	
20°F	3720	5010	5985	7190	7845	
	(1691)	(2277)	(2721)	(3268)	(3566)	
Cold Water	5870	8280	10140	11710	13100	
	(2668)	(3764)	(4609)	(5323)	(5955)	


# 1" & 1-1/2" (DN25 & DN40) Size Inlet/Outlets

Condensate Temp	Capacity - Ibs/hr (kg/hr) @ Differential				
Below Saturation	Pressure - psi (bar)				
(Subcooled Temp)	10	20	30	40	50
	(0,69)	(1,38)	(2,07)	(2,76)	(3,45)
5°F	1490	1980	2705	3355	3750
	(677)	(900)	(1230)	(1525)	(1705)
10°F	2410	3370	4310	5080	5675
	(1096)	(1532)	(1959)	(2309)	(2580)
20°F	4090	5510	6585	7910	8630
	(1859)	(2505)	(2993)	(3596)	(3923)
Cold Water	6460	9110	11550	12800	14410
	(2936)	(4141)	(5250)	(5818)	(6550)

# Traditional Wingnut Clamp

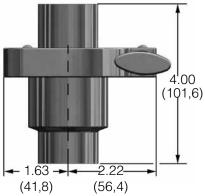

# DIMENSIONS - HORIZONTAL CONNECTIONS

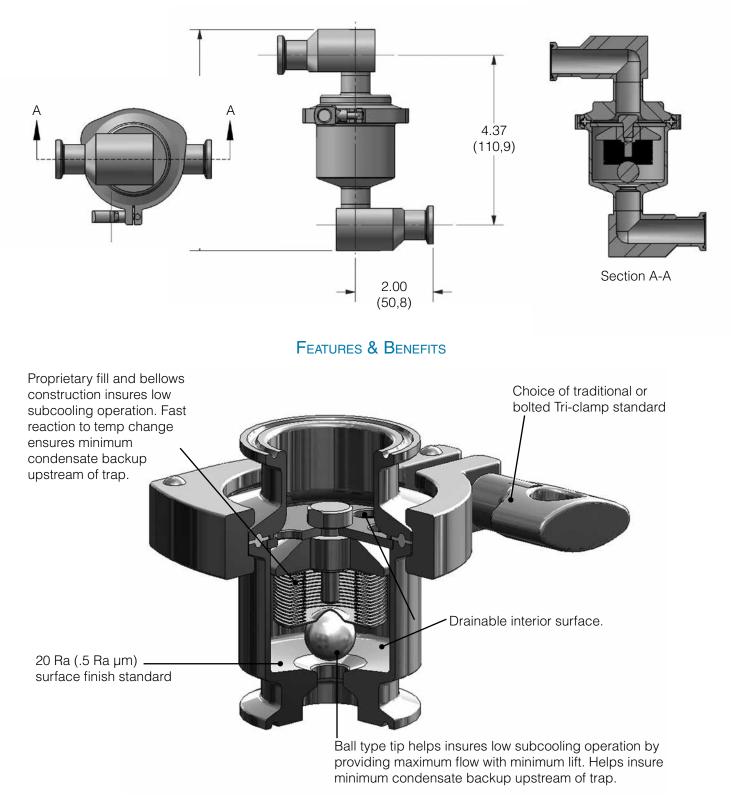

# **S**PECIFICATION

Fully drainable, high capacity sanitary steam trap with body and plug components made from ASTM A479 316L. Ball type stem tip pulls completely out of orifice flow path allowing full flow between 1355 #/hr of 5oF subcooled condensate at SIP vessel maintenance temperature, to 14410 #/hr max cool water flow during SIP heat up.

# ORDERING SCHEMATIC

Model	Body		Size	End Connections	Special Options
94	С	_	075	 С	 К

	Model/Body Joint
94C	Tri-Clamp Standard

	Size		
075	3/4"	DN20	
100	1"	DN25	
150	1-1/2"	DN40	

4	Options			
G	Tuf-Steel, TFE/SST Body Gasket, FDA USP Class VI			
K	Bolted Clamp			
L	Electropolish			
S	Silverback Gasket TFE/SST Body Gasket, USP Class VI			
Z	Non-Standard			

Note: You can combine up to two options in alphabetical order.

For example: 94C-075-CHCH-LS

= MK94C with 3/4" Tri-clamp body, wingnut clamp, horizontal inlet and outlet with electropolish body and silverback gasket

Note: Note: if no gasket is specifically requested, a TFE/Viton gasket is provided

3		End Connections				
In	let	Outlet		Outlet		
(	C			Inch Tri-Clamp Vertical Inlet/Outlet		
	S			ISO Tri-Clamp Vertical Inlet/Outlet		
[ [	D			DIN Tri-Clamp Vertical Inlet/Outlet		
-	Т			Inch Tube Vertical Inlet/Outlet		
M	**					DIN Tube Vertical Inlet/Outlet
P'	P***			ISO TUbe Vertical Inlet/Outlet		
	Z			Non-Standard		
С	Н	СН		Inch Tri-Clamp Horizontal Inlet/Outlet		
С	Н	С	V	Inch Tri-Clamp Horizontal Inlet/Vertical Outlet		
С	V	C H Inc		Inch Tri-Clamp Vertical Inlet/Horizontal Outlet		

\*\* According to DIN 1186, DIN 11850 row A

\*\*\* According to ISO DIN 1186 line B, ISO 1127



Steriflow 3170 Wasson Road • Cincinnati, OH 45209 513.533.5600 steriflow@richardsind.com • www.steriflowvalve.com

Steriflow Valve reserves the right to make revisions to its product, specifications, literature and related information without notice. Please visit our website at www.steriflowvalve.com for the latest information on our products.